


ALUMINUM MODULAR DOOR ASSEMBLY INSTRUCTIONS

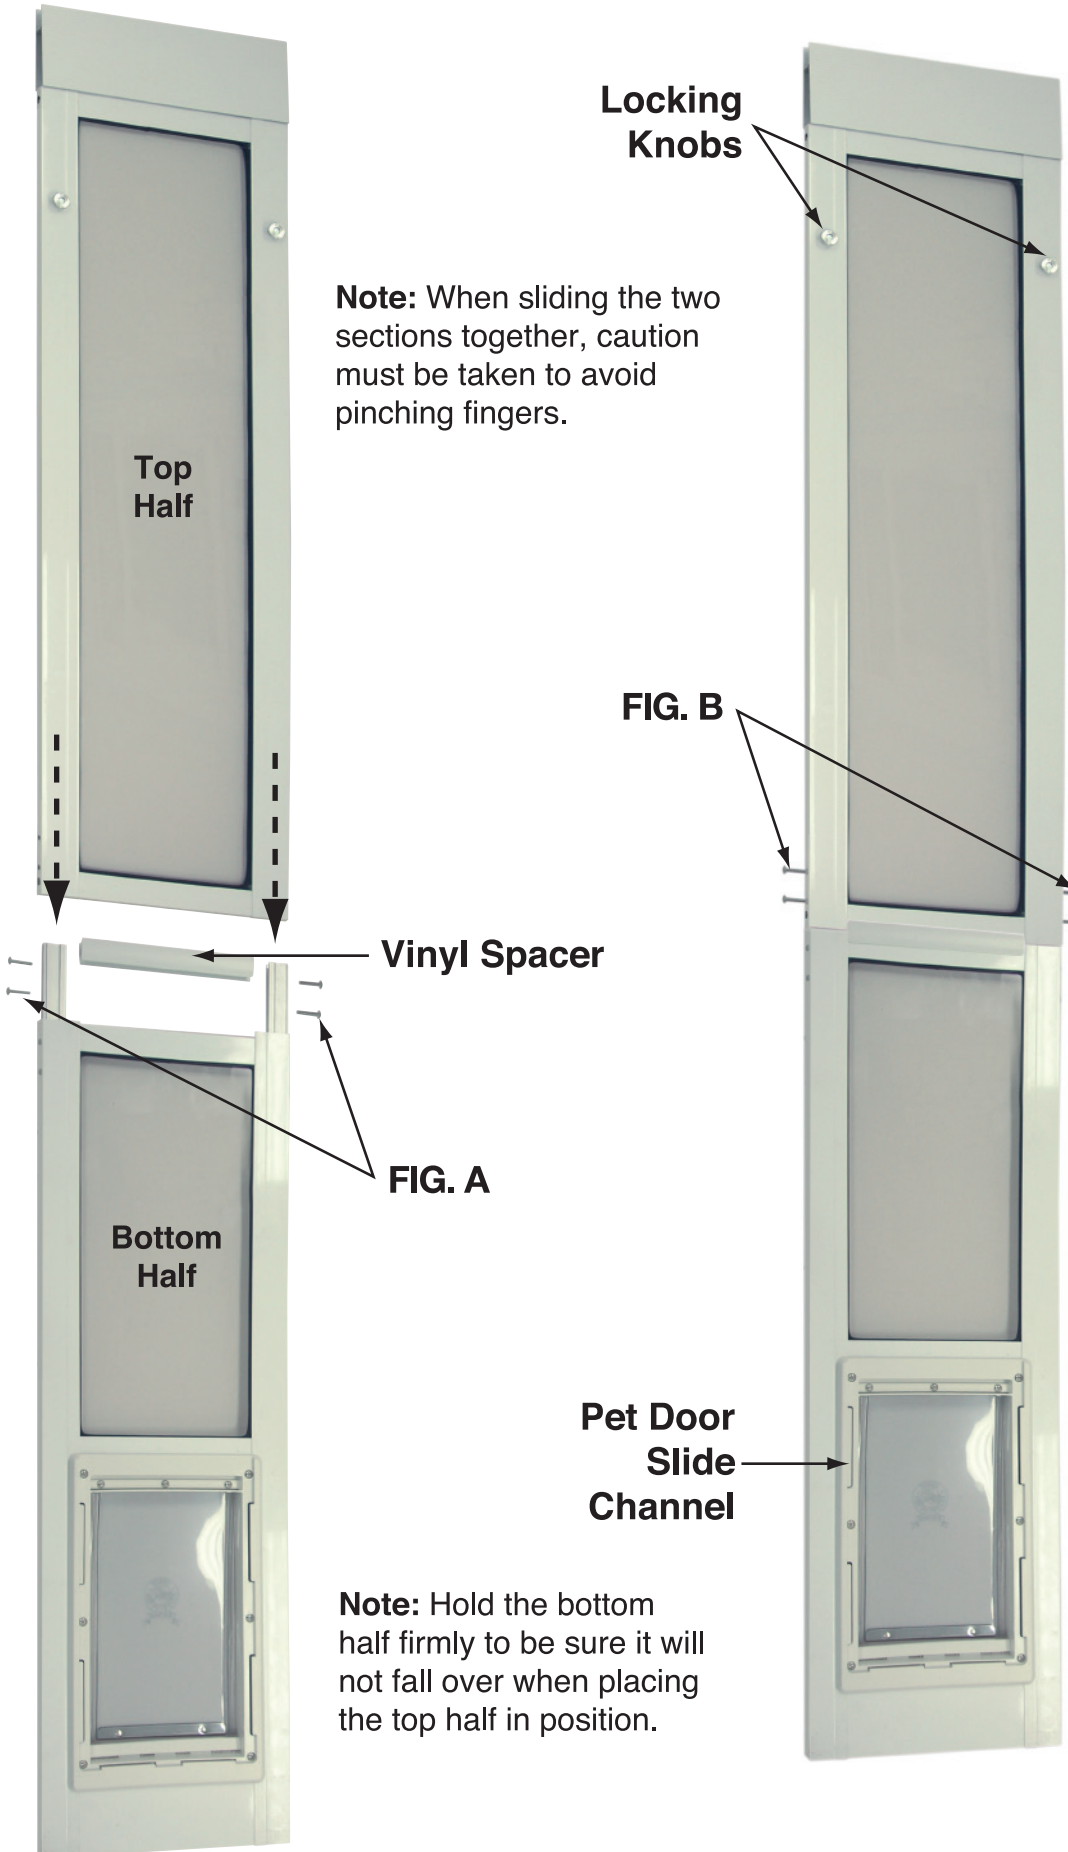

Note: When sliding the two sections together, caution must be taken to avoid pinching fingers.

Note: Hold the bottom half firmly to be sure it will not fall over when placing the top half in position.

TOOLS REQUIRED:

- Safety goggles
- Phillips screw driver

1. Remove door top and bottom halves from box.
2. Remove 2 left and 2 right side #8 x 1" screws from inserts. **See FIG. A.**

3. Make sure **Vinyl Spacer** is placed on top of the bottom half, then carefully slide top half (without posts) onto bottom half (with posts).

4. Reinstall 2 left and 2 right side #8 x 1" screws and tightly secure with Phillips screw driver. **See FIG. B.**

IMPORTANT: The **Locking Knobs** at top of door, and the **Pet Door Slide Channel**, should be facing inside of house.

5. Refer to Pet Patio Door Installation Instructions (included), for installing into your Sliding Patio Door.

